CAMPOMATIC

Refrigerator User’s Manual

MODEL:FC420MS

Please go through this manual before use.
Thank you for purchasing our products.

Attention:
● Please understand the safety instructions before use.
● Please keep this manual well after reading it for further reference.
● Notice will not be given if this manual is altered due to product improvement.

Contents:

Name of Parts and Components

Preparations before Use

How to Use the Fridge Correctly

Attention

Maintenance

Fault and Solution

Parameters and Circuit Diagram

Door Right-Left Change

Name of Parts and Components

The fridge purchased by you may be not absolutely in accord with this manual. The packing list in the fridge shall prevail.

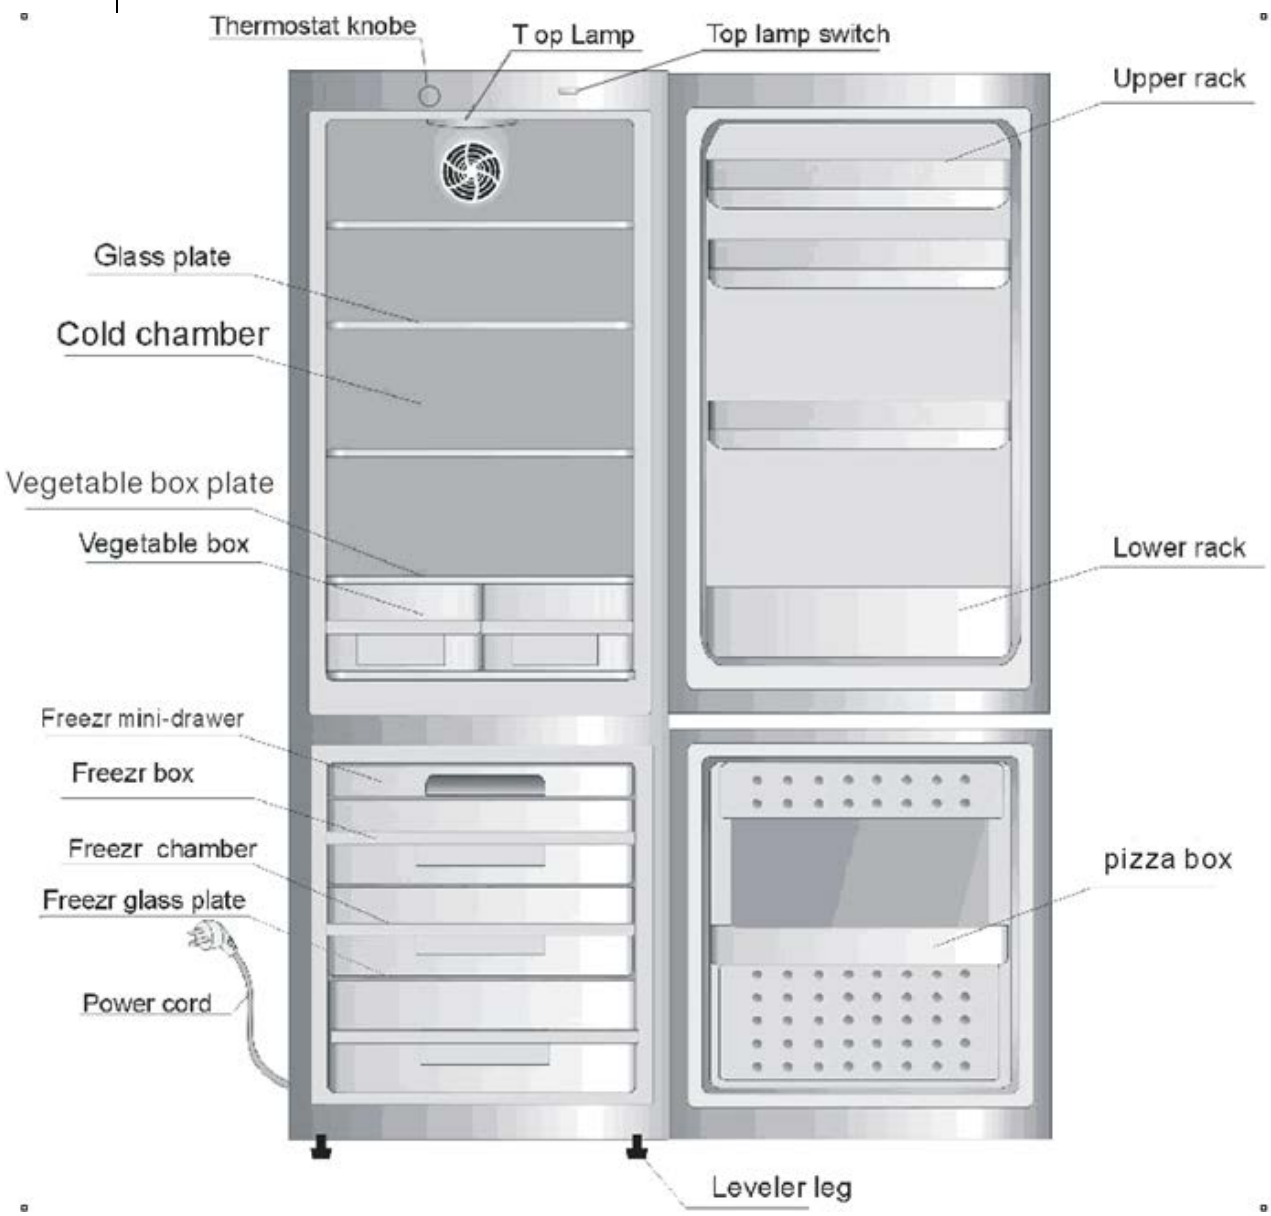

Preparations before Use

Product Properties

Warning

1. WARNING – Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
2. WARNING – Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. WARNING – Do not damage the refrigerant circuit.
4. WARNING – Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
5. The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. Please abandon the refrigerator according to local regulators for it use flammable blowing gas and refrigerant.
10. Disconnect the power supply before replacing the lamp.
11. Please according to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas. Before you scrap the appliance, please take off the doors to prevent children trapped.

How to prepare new fridge

- Before using new fridge, please get rid of all wrappings, including base mat, foam cushion for the outside, the rear, the condenser and foam cushion, gummed paper for the inside of the fridge.
- Wipe clean the inside and outside of the fridge with warm and humid rag (A little detergent can be added in the warm water. Wipe clean finally with clear water);
- Prepare a separate 2-pole socket plus grounding, which shall not be

shared with other appliances;

●Please connect the earth wire and the earth electrode of the socket shall have a reliable earth wire.

Transportation and Placement

Transportation

●Don’t turn over, keep horizontal, extrude or vibrate the fridge. Its inclination shall not exceed 45° when moving it.

●Please don’t hold the door or cap when moving the fridge to avoid any deformation.

●It is allowed to put the fridge backwards (no more than 20°) to facilitate movement in a distance by rolling the rear trundle.。

Placement

●The fridge shall be located in good ventilation, far from heat source, out of direct solar radiation and free of damp or water, so as to avoid rust or bad insulation.

●The space above the top of the fridge shall not less than 30cm, the distance from both sides and the rear to the wall shall not less than 10cm, so as to facilitate its opening, shutting and heat release.the dimensions of refrigerator are shown in the figure below.

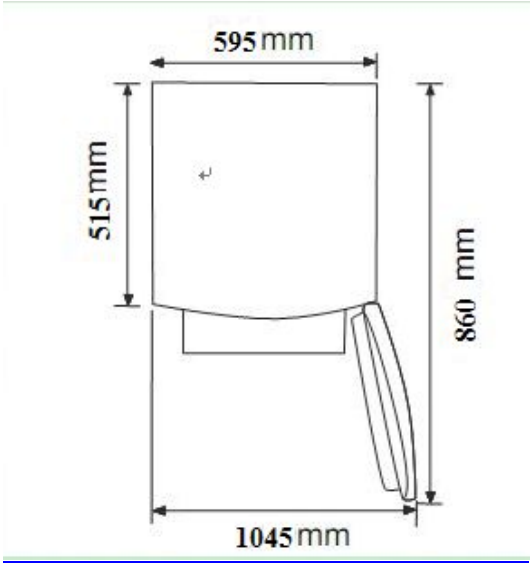

●The fridge shall stand on the flat and solid ground. (If not stationary, level it by adjusting its feet)

Attention

The power core shall not bear the fridge or other objects to avoid damaging it.

Before electrifying the fridge, please check if its voltage accords with the

mains voltage.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

How to Use the Fridge Correctly

Cold Chamber

- ●The food stored in a short term or eaten in no time shall be put in the cold chamber, where the temperature is 0-10℃ approximately. Although it can restrict bacteria from reproduction, it is improper to store food in the cold chamber for long.
- ●The cooked food shall be put in the cold chamber after it is cooled to the room temperature.
- ●It is better to airproof food before refrigeration.
- ●Moisture on vegetables, before refreshing, must be cleared. Otherwise, their rotting will be expedited in the box which contains moisture. Vegetables, if wrapped, can be stored longer.

Freezer Chamber

●Usually, the temperature of the freezer chamber is below －18℃. It is best to put the food, if stored for a long time, in this chamber.

●Quick frozen food shall be stored in this chamber as quickly as possible when it is not unfrozen.

●Hot food must be cooled to the room temperature before being put into this chamber.

●It is prohibited to put fruits, vegetables and glass container with liquid therein into this chamber, or they will be frozen off or explode.

●Frozen food shall be classified with the same type put together, which can prevent the door from being unnecessarily opened in a long time and, as a result, save energy.

Freezer Drawer

Large-pieced meat shall be cut into small pieces before freezing, if necessary, to facilitate cooking. If taking out the drawer, please pull out forward and then raise it slightly upward.

If you want to put the bigger food into freezer, you will be allowed to take out the top three drawers from the freezer, and put the food on the glass plate.

Note: After using the freezer chamber, please close the drawer and then shut off its door.

Ice-Making Box（If the product contains ice-Making Box）

It is used to make ice block by putting cooled boiled water equal to 4/5 of the volume in the freezer chamber for a few hours. Twist the ice box to separate ice block from the box, but don't bend it to avoid fracture.

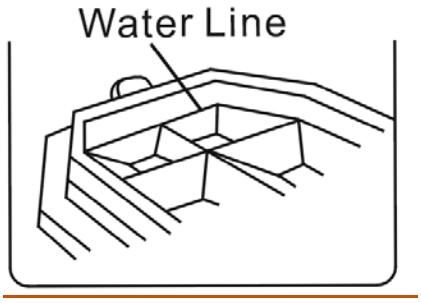

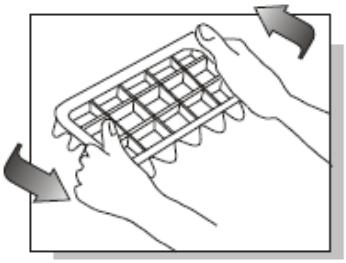

Thermostat

Thermostat knobe is to be used to adjust the temperature of the fridge chamber. In the same ambient temperature, the knobe digit the bigger, the temperature of the fridge chamber the lower; the smaller the knobe digit, the higher the temperature of the fridge chamber. Digit "0" indicate the compressor stop working.

When the compressor run overtime or there is big ice cube in cold chamber,

you chould turn the knob to the smaller digit.
When the temperature in the fridge is high and the food in the fridge is not fresh in shorter time, you should turn the knob to the bigger digit. Normally, we suggest you turn the knob to the digit 3.
Note: the digit on knob represent graduation, do not represent the chamber temperature.

Attention

Please don’t detach or repair the fridge. Please replace accessories at the maintenance office designated by the manufacturer.
Please use standard 3-hole power socket above 10A, which shall be grounded well.

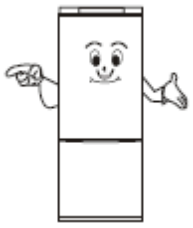

Please don’t use inflammable solvent near the fridge to avoid fire.
Please don’t put inflammable, explosive, volatile and/or strongly-corrosive substances in the fridge to avoid damage or fire. Please don’t put liquid bottle or closed container in the fridge to avoid explosion or damage.

Please don’t let children get into or climb the fridge to avoid injuring or prevent it from falling down to injure them.
Please don’t put weights on the top of the fridge, for they may fall down when closing the door.

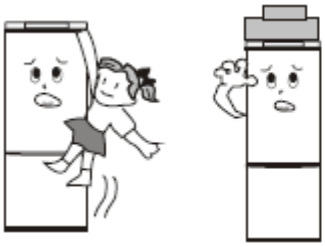

Please don’t put too much food in the fridge.
Please avoid opening the door long or frequently, which would lower the overall efficiency and increase the running load.

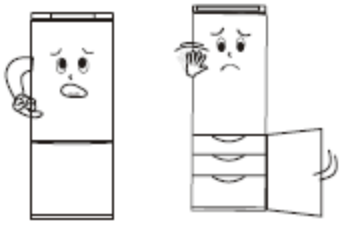

When the fridge runs abnormally or is damaged, please shut off the power supply and notify the local service center.
Please splash water onto the top and rear of the fridge, which would lower the insulation.

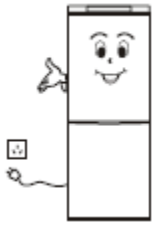

Note:
This fridge is designed for household purpose, only suitable for storing food, not for other purposes, such as blood, medicine or biological product, etc.

Maintenance

Defrost
Before defrost, please take off the power cord. Then open the freezer door, remove the food, drawer and ice-box all things out from the freezer, waiting for defrosting; if you want to accelerate defrost, put a cup of hot water (about 50℃) in the freezer. Cleaning the water come from defrost with dry soft cloth. Do not defrost with metal tools and electric heater, otherwise damage the fridge possibly. If there is heavy frost, please defrost in time, otherwise weaken the cooling. In general, you need defrost once per three month.

Cleaning
Clear the dust behind the fridge and on the ground regularly.
The inside of the fridge must be cleared up frequently to eliminate strange smell. Please shut off the power supply before cleaning. Please use soft towel and neutral detergent and finally wipe clean with clear water.
Please don’t use the following substances to clean the inside of the fridge:
●Alkaline or alkalescent detergent (which may crack the liner and plastic parts);
●Soap powder, bensoline, banana water, etc. (which may damage the plastic

parts);
●Please wipe away the edible oil or spice timely, if attached to the fridge. (which may crack the plastic parts)

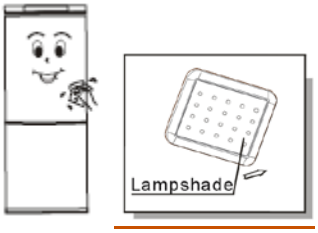

Lamp and replacement
The lamp is 220V/2W(AC) and replaced after shutting off the power supply.
Please detach the lampshade first, detach the 3 bolts and then replace LED lamp (detach 3 bolts). Please see the diagram.
Please use the standard accessory.
(The diagram only serves for indication. The real product shall prevail.)

Shutdown
Out of service for long: Please shut off the power supply, for the aged wire may cause electric shock o fire; keep the door open for some time and close it after the inside of the fridge is dry completely.
Power failure: Please reduce the frequency of door opening as much as possible; fresh food is not suitably put in again.
Abandonment: If the fridge is abandoned, please detach the door therefrom to prevent child from getting in.

Fault and Solution

Before maintenance, please go through the following table.

Fault	Cause
Fridge not working	● See if power is through and if plug is inserted fast. ● See if the voltage is too low.
Bad refrigeration	● See if temperature is over-high as adjusted ● See if too much food is put in. ● See if too hot food is put in. ● See if the door is opened and closed too frequently. ● See if there is any heat source near the fridge
Loud noise	● See if the ground is flat and if the fridge is placed steadily. ● See if the accessories to the fridge are located in place.
Food in cold chamber frozen	● See if the cold-storage temperature is in the quick-cold mode. ● See if the food containing too much water is put on the inner side of the rack
Peculiar smell	● The food with smell shall be sealed closely. ● See if there is any food going bad. ● The inside of the fridge needs cleaning.

If the fridge can’t work soundly still after checkup as abovementioned, please contact our post-sale service office.
If the soft cord of power supply is damaged, the replacement must be done by our personnel in order to avoid any danger.

Non-fault problems
The liquid refrigerant in the capillaries of the fridge flows very fast and sometimes contain a few bubbles, which, as a result, may produce irregular murmurs at their exit.

When the fridge is working, its rear serves to radiate heat.

In the event of large humidity in the air, the area around the door may be wet. Just wipe with cloth.

Energy Saving Tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

Door Right-Left Change

1. Remove hinged cover on the top and detach top hinge

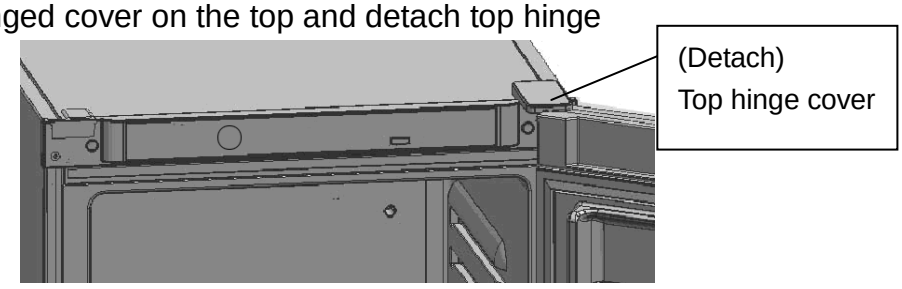

2. Detach the door of the cold chamber

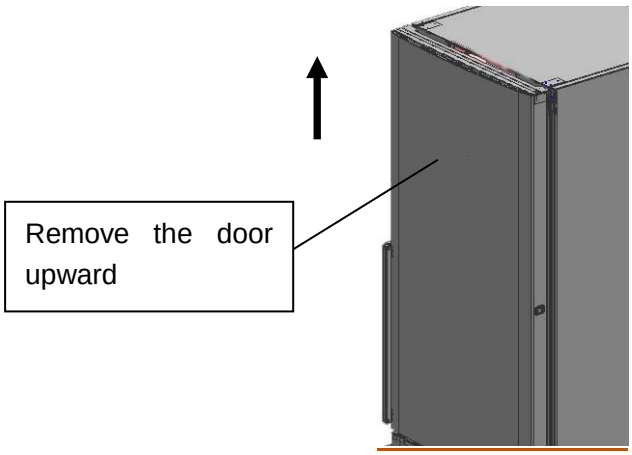

3. Remove the fixing middle-hinge bolts and detach the middle hinge

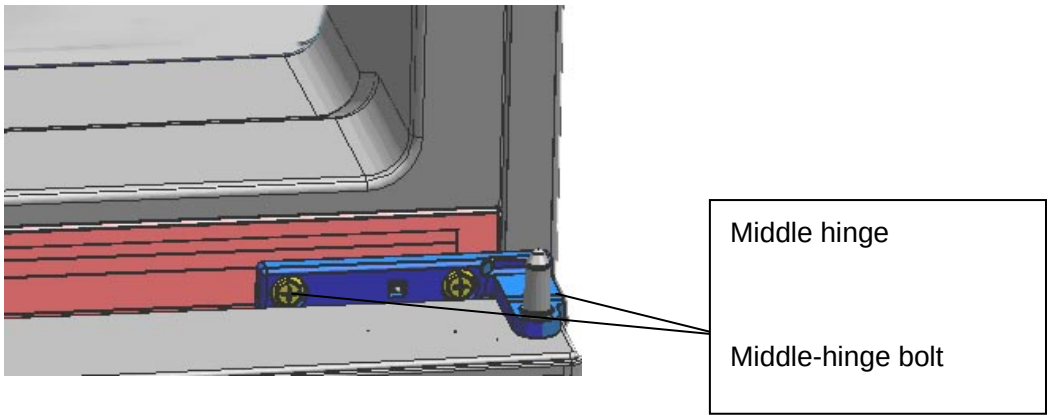

4. Remove the door of the freezer chamber upward

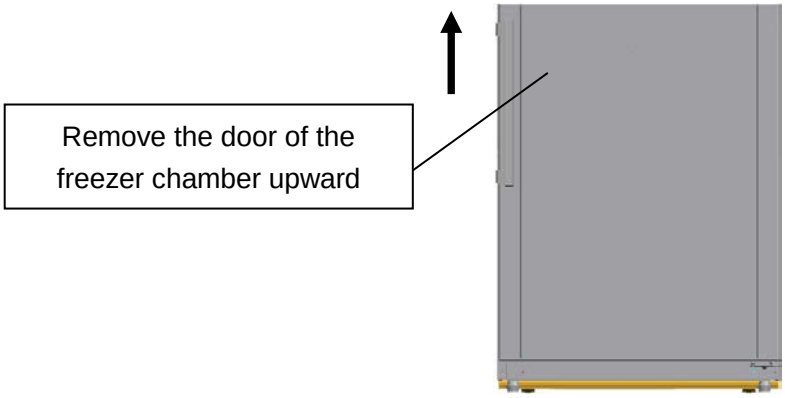

5. Remove the fixing lower-hinge bolts and detach the lower hinge

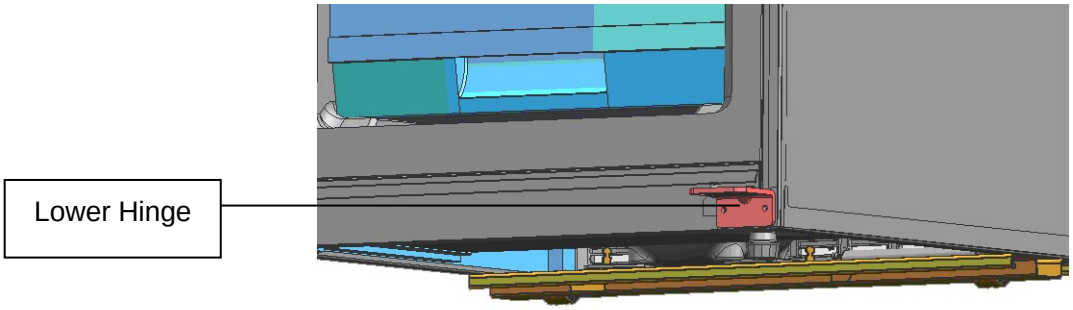

6. Replace the parts

Replace the lower-hinge bolt to the symmetrical position of lower hinge, and mount the lower-hinge module to the symmetrical position of the fridge.

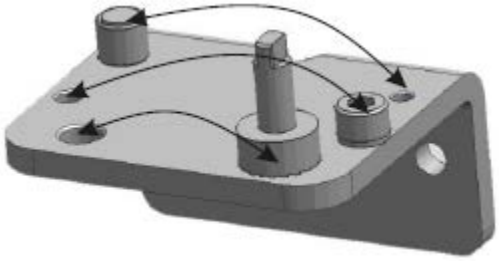

Replace the door handle to the symmetrical position of the door.
(Remove the bolt cover with blade and the bolts then to detach the handle)

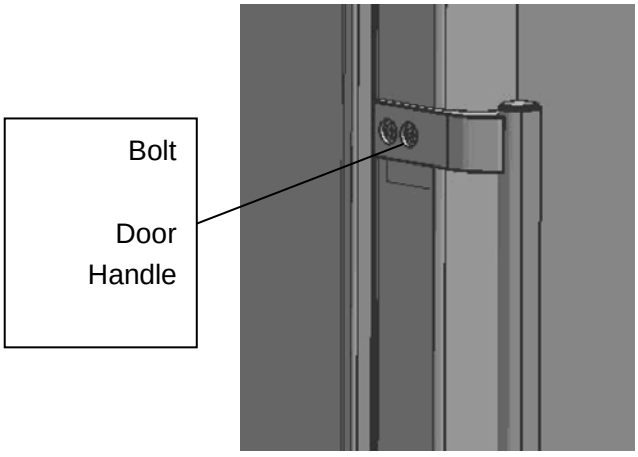

Replace the self-lock and dog on the freezer door to the symmetrical position of the door on the left side.

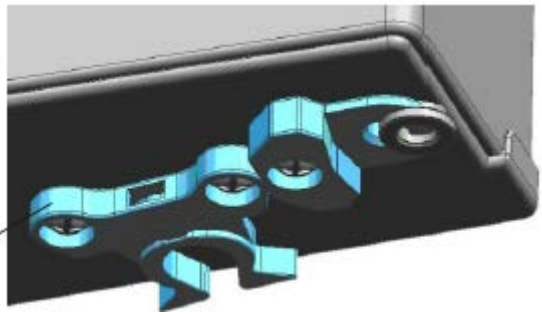

Replace the relevant plastic parts to the symmetrical position of the cold-chamber door.

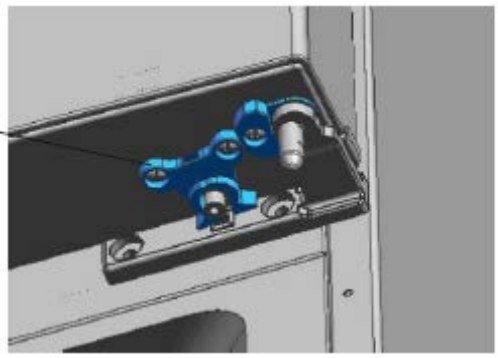

7. Mount the freezer door remodeled as above to the lower hinge.

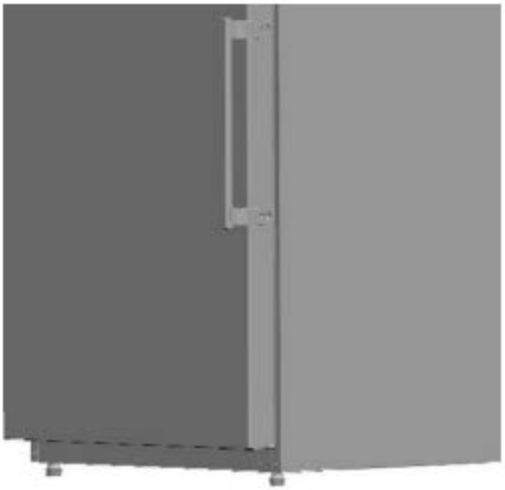

8. Mount the middle hinge to the symmetrical position with bolts

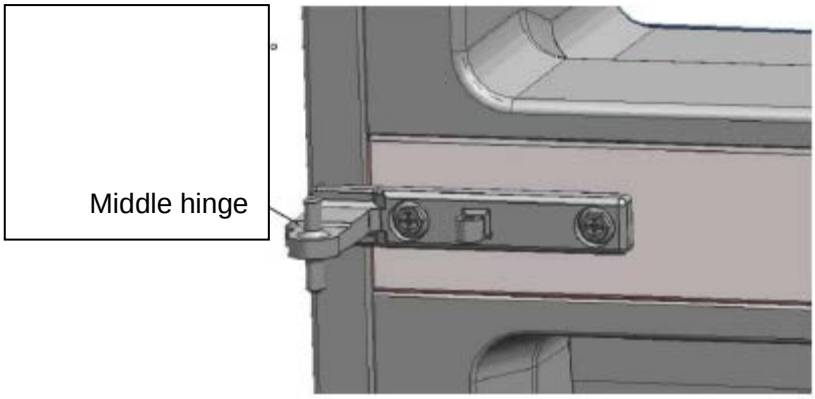

9. Mount the cold-chamber door remodeled as above to the middle hinge.

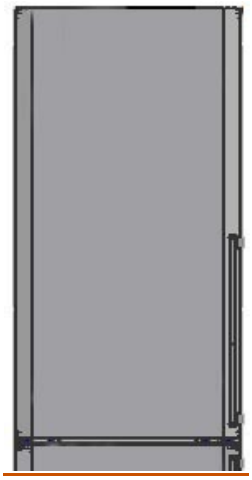

10. Mount the left hinge to the left side of the fridge.
11. Put the upper hinge cover in place.

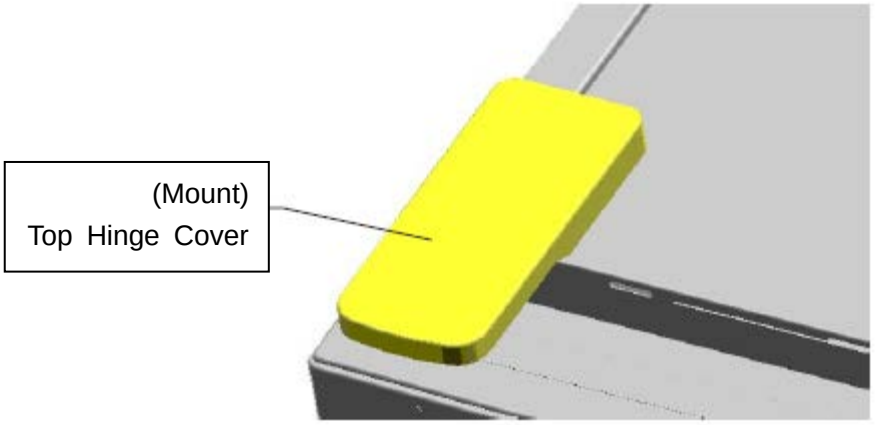

12. The diagram where the handle is mounted to the right side

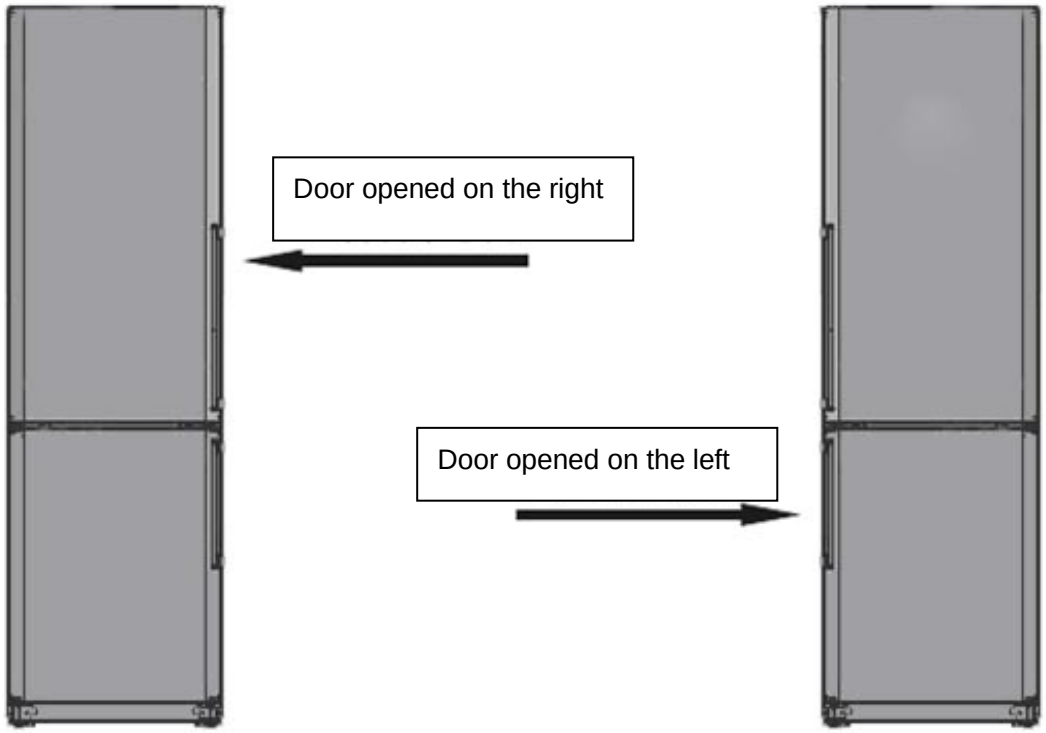

Correct Disposal of this product	
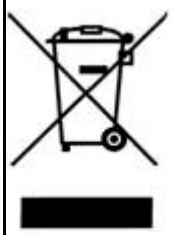	Correct Disposal of this product This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.